



Setting up GooLink

First install the app on your smartphone/tablet. This can be found on the iOS App Store, for iPhone or iPad, or the Google Play Store, for Android devices.

Open the app and press the **plus** button, to open the add menu.

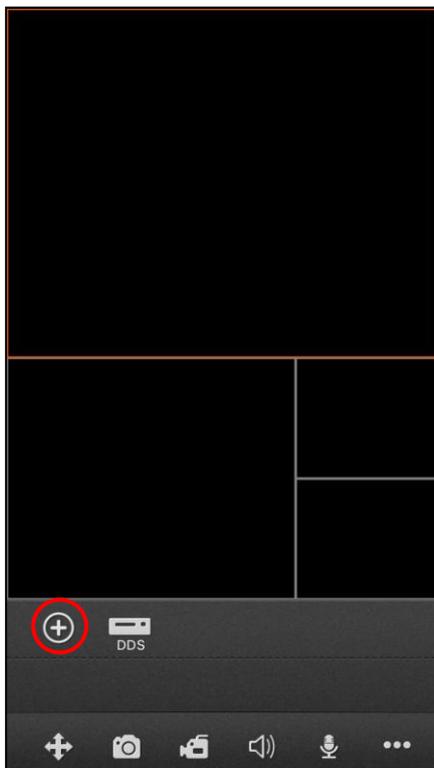

Next, press on **QR Code Scan**. This will open up your cameras rear viewfinder.

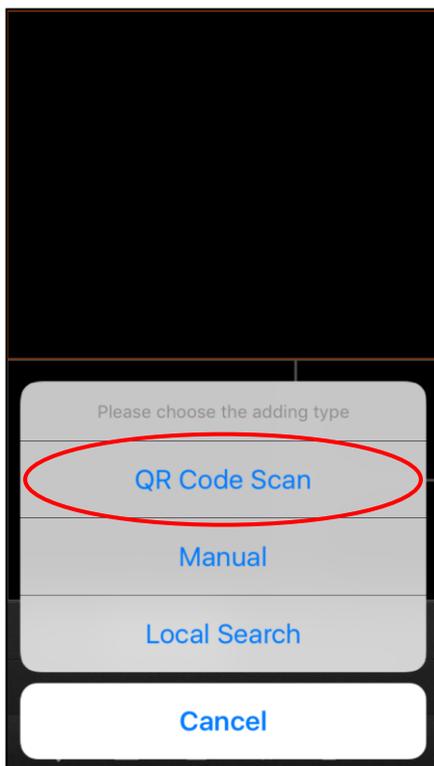

You will now need to navigate one of two ways to access the QR code to scan;

Via the NVR itself - RIGHT CLICK (with the mouse) > **SETTINGS** > **DEVICE INFO** > **QR CODE** > hold your phone up to the QR code and it will fill the GID for you.

Via a remote browser - Log in via the address then go to **CONFIG** > **DEVICE INFO** > **QR CODE** > hold your phone up to the QR code and it will fill the GID for you.

Next you will need to fill in the rest of the details;


Name – This is a nickname to give your CCTV system, so you can put whatever you like

GID - This will already be filled in.

User - admin

Password - blank

Channel Number - Choose this depending on which NVR you have, if you're not sure, choose Auto

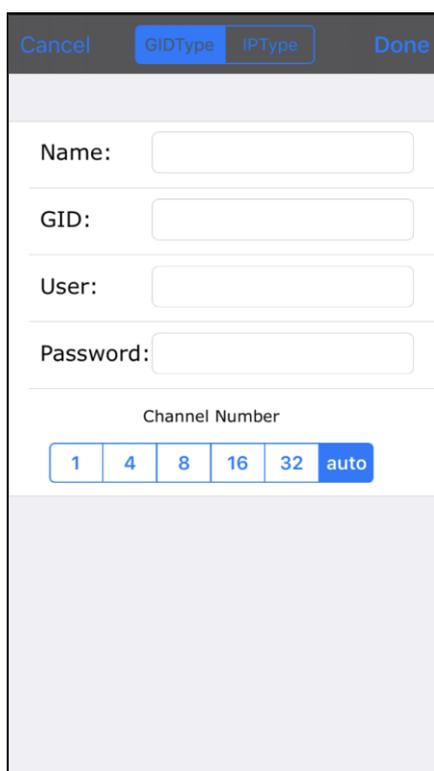

The screenshot shows a mobile application interface for configuring a GooLink. At the top, there are three buttons: 'Cancel', 'GIDType', and 'Done'. Below these are four input fields: 'Name:', 'GID:', 'User:', and 'Password:'. At the bottom, there is a 'Channel Number' section with a row of buttons: '1', '4', '8', '16', '32', and 'auto'. The 'auto' button is highlighted in blue.

Once this is filled in, press the **Done** button; you should be able to select your NVR and view your cameras.