




# Setting up Motion Detection

---


## Motion Recording

Firstly **login** to the Vortec and go to the **quick setup tab**. You should be greeted with the following screen:

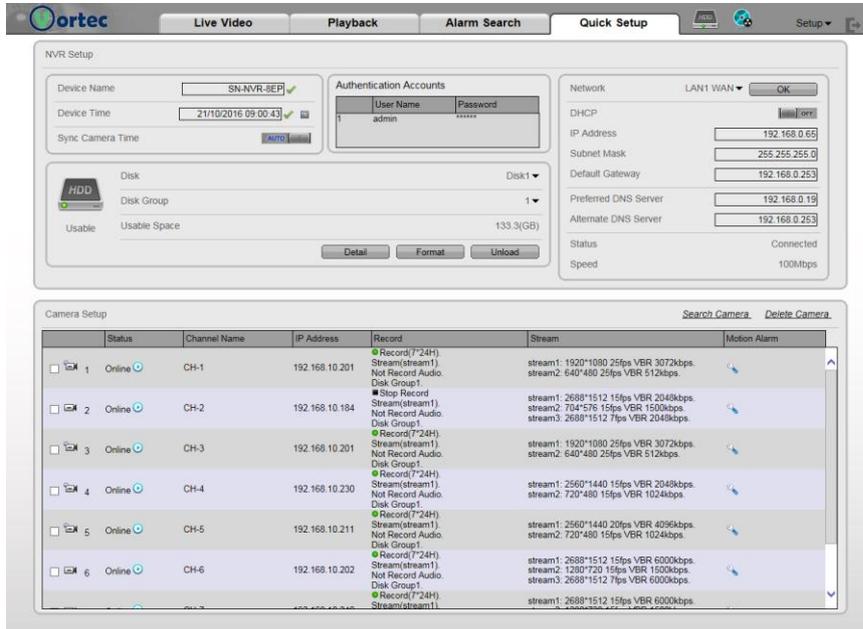


Then to setup motion recording, click the **spanner icon**  in the **motion alarm column**. This should open a new window; you will want your settings to be **similar to the ones** in the screenshot below. Also check the schedule setting is set to **every day of the week and that the start time is 00:00 and the finish time is 24:00**.

Then once this is done, please ensure that if you are setting channel **one**, then the channel record setting **must match** the channel which you are setting. So for example here we are setting **channel 1** and the **1** is selected.

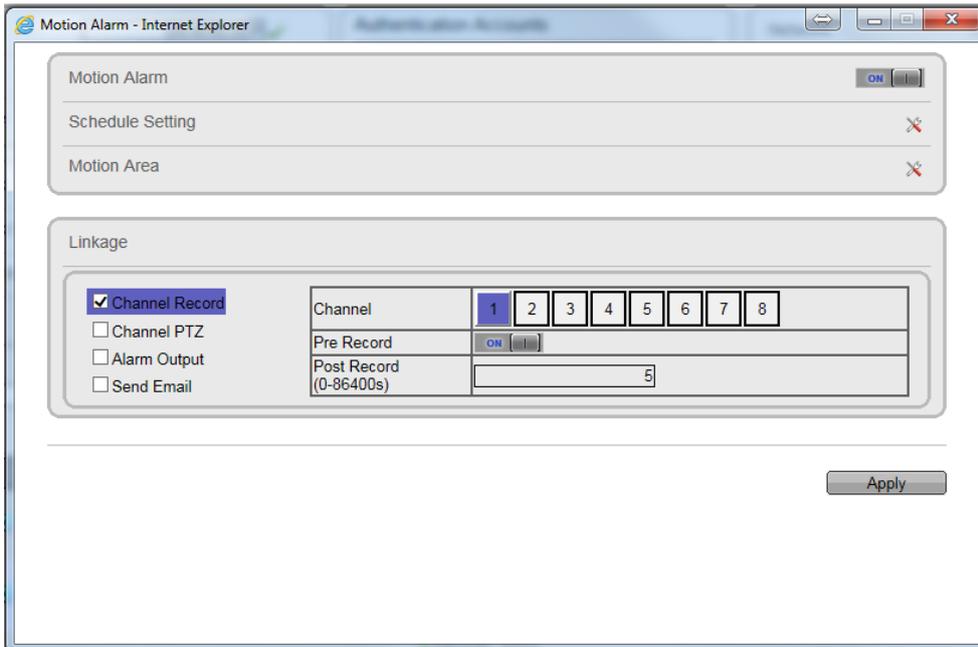


Finally you will need to make sure that **schedule record is off**, you can do this by going back to the **quick setup** section and clicking on the **record section** which is **in line with the camera** you are setting up. This will open a new window; in here simply make sure that the **schedule record setting is off** rather than on. Then once you have done this the NVR will be recording on motion all the time.

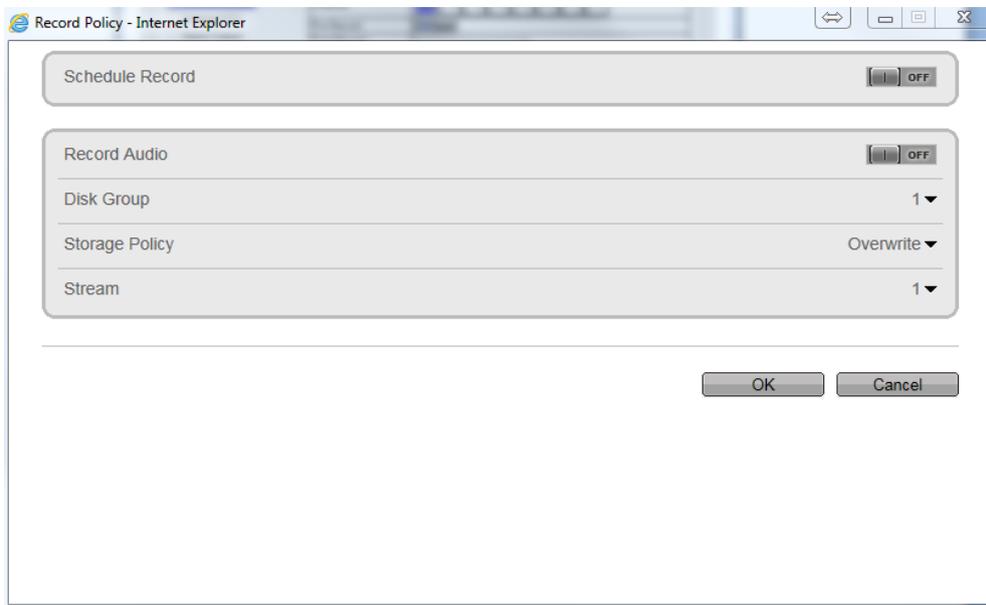


## Motion Sensitivity and Motion Areas


To adjust the motion sensitivity and motion areas for each camera you will need to go to the **Quick Setup** tab along the top, you will then need to click the **motion alarm spanner** which correlates to the camera you wish to change. This will then show you the following screen:

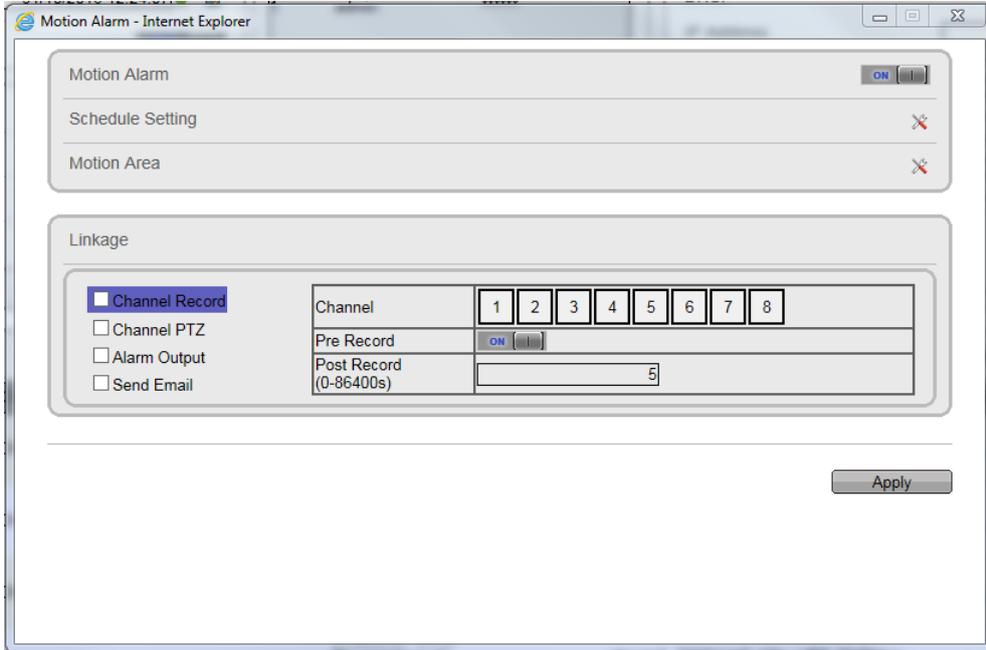


Now you will need to ensure that **motion alarm is on**, and then you can select **Motion Area**. The following screen will show once you click the motion area icon.

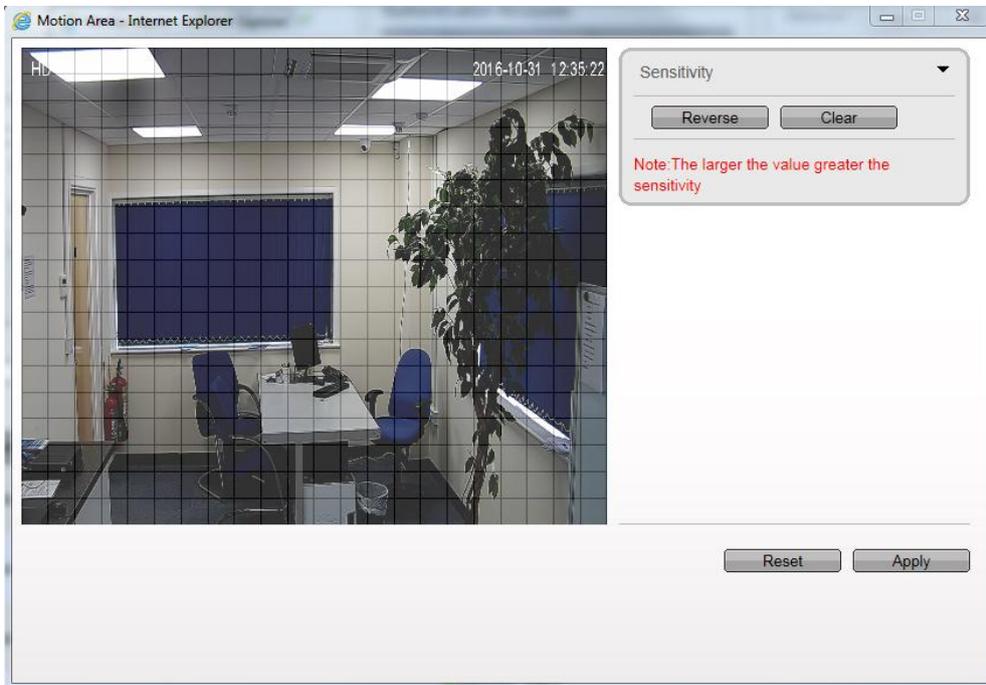

Now you can edit the **motion area by clicking and dragging across the squares**, the **blue highlighted area** will be the areas where motion detection is activated.

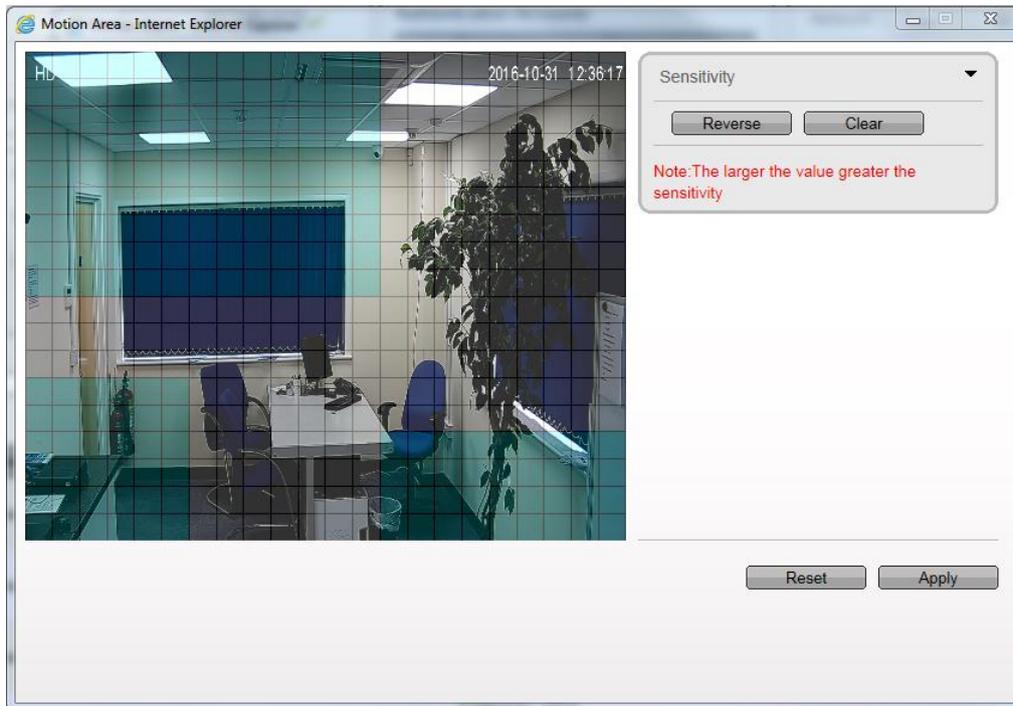

To adjust the **sensitivity**, use the **sensitivity section** in the top right hand side. To change the sensitivity click the **drop down arrow**, now you will be able to choose a **number from 1 – 10** with 1 being the least sensitive and 10 being the most.

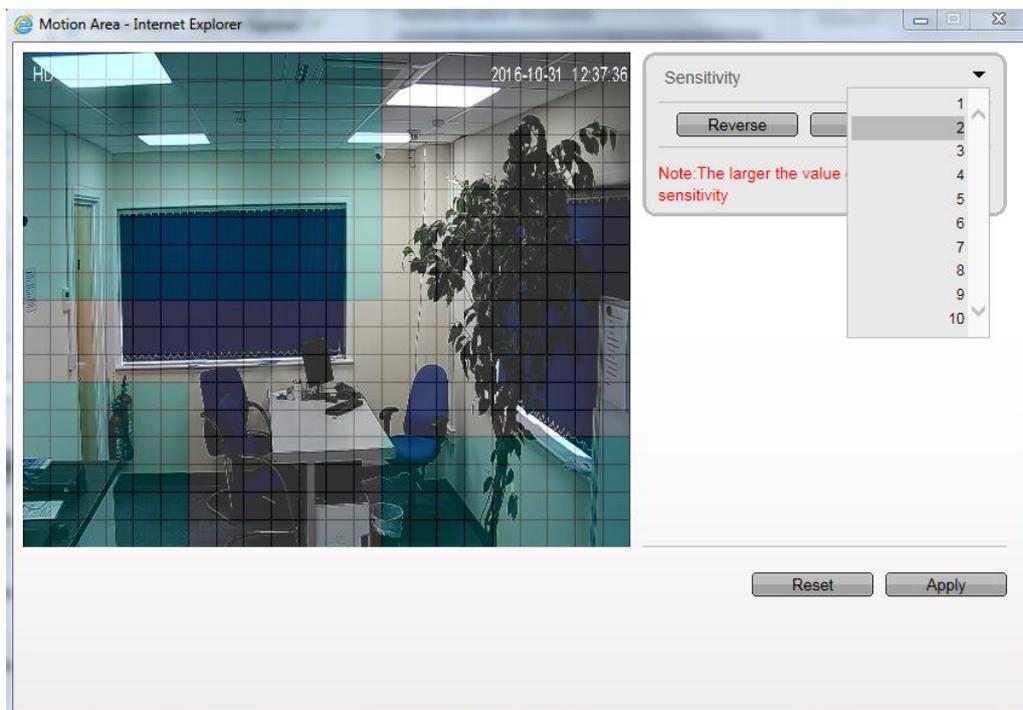

Once you have done this, simply click **Apply** and then **Apply** again to save all the changes you have made.