





Setting up Constant Recording

Constant Recording

Firstly, **login** to the Vortec and go to the **quick setup tab** along the top of the page. Then for the channel you would like to change **click the channel** in the record column. A new window will pop up and here you will need to **match the following settings**:

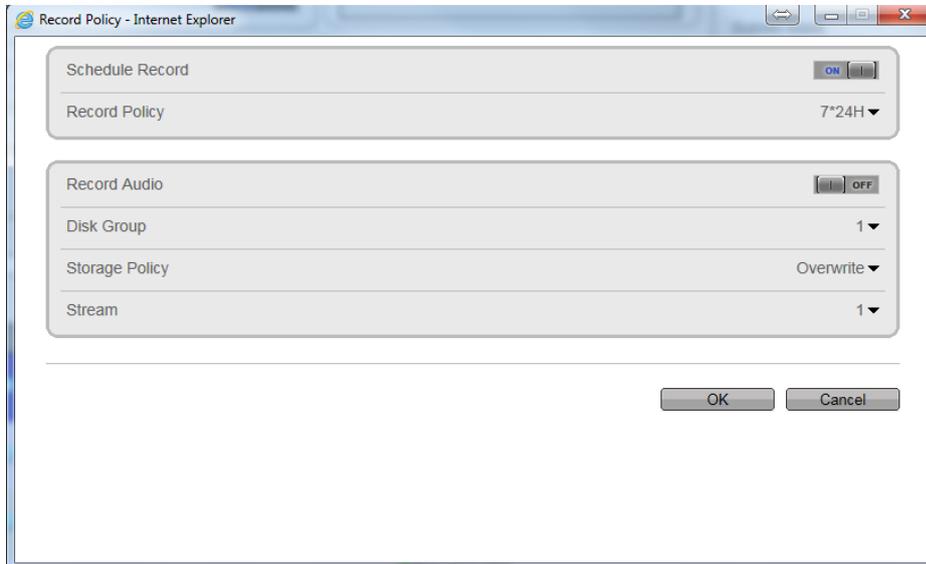

Once you have done this click on the **OK** button. Then click the spanner icon  in the motion alarm section you will then see the following screen.

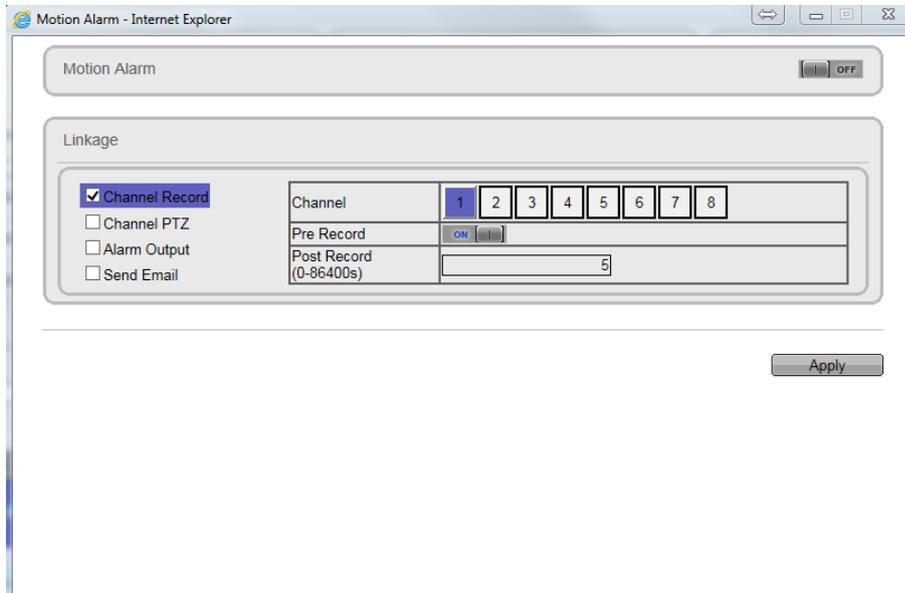

Then please make sure that the **motion alarm button is set to the off** position. Then finally, click **Apply**, this will save the changes you have made and now your Vortec will be recording constantly all the time.